



Instruction manual

EN

Bedienungsanleitung

DE

# BLACK EIGHT PRECISION APPLICATION TOOL

Art. No. **01069400**

# INSTRUCTION MANUAL

Attaching self-adhesive profiles to the windscreen without the recommended pressure or correct position from the glass edge may inevitably lead to wind noise and leaks. Moisture may then settle under the profile and optical defects can easily lead to expensive re-work or claims.

An application example for operating **Black Eight** can be found on the Internet under the following QR code:



With **Black Eight**, the precision tool from PMA/TOOLS, the profile is applied to the glass accurately and with the correct adhesion pressure in accordance to OE specifications. This easy-to-use tool also ensures that the profile is applied in a straight line. Supplied with four pre-mounted rolls it can be used for various vehicle models. Avoid re-work or claims by using **Black Eight!**

# Safety instructions

## For your protection



Use hand protection!

# Accessories



**Black Eight application roll set for HYUNDAI/KIA profile, self-adh.**

Art. No.: 01069401



**Black Eight application roll set for AUDI profile, self-adh.**

Art. No.: 01069402



**Black Eight application roll set for MERCEDES profile, self-adh.**

Art. No.: 01069403

# Accessories



**Black Eight application roll set for FORD/MERCEDES/VW profile, self-adh.**

Art. No.: 01069404



**Black Eight application roll set for AUDI/FIAT/JAGUAR/RENAULT/SEAT/VW profile, self-adh.**

Art. No.: 01069407



**Black Eight application roll set for JEEP/MERCEDES/OPEL/SKODA/VOLVO/VW profile, self-adh.**

Art. No.: 01069405



**Black Eight application roll set for OPEL profile, self-adh.**

Art. No.: 01069408



**Black Eight application roll set for AUDI/MERCEDES/VW profile, self-adh.**

Art. No.: 01069406

# 1.

Clean and primer silk print area.




# 2.

Turn the lever to open the profile applicator.



### 3.

Slowly remove the protective film from the profile and carefully position over the guide rolls.

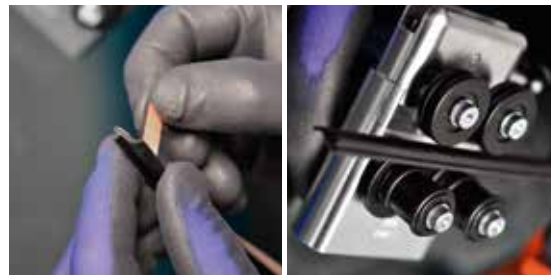

### 4.

Position the profile applicator on the glass edge and carefully adjust the profile.



## 5.

Push the lever up to achieve the correct pressure.  
Make sure the profile is positioned accurately in the guide rolls.



## 6.

Slowly and evenly, run the applicator around the entire edge of the glass. Continue removing the protective film slowly whilst feeding the profile through the rolls.



# BEDIENUNGSANLEITUNG

Beim Anbringen von selbstklebenden Scheibenprofilen ohne den richtigen Anpressdruck und gleichbleibendem Abstand zur Glaskante entstehen sehr häufig Windgeräusche. Feuchtigkeit kann unter das Profil gelangen und optische Mängel können leicht zu teuren Reklamationen führen.

Ein Anwendungsbeispiel zur Bedienung des **Black Eight** finden Sie im Internet unter folgendem QR-Code.



Mit dem Präzisionswerkzeug **Black Eight** von PMA/TOOLS wird das Profil OE-konform, positionsgenau und mit dem korrekten Druck auf die Scheibe appliziert. Es gewährleistet eine gerade Linienführung bei einfachster Handhabung. **Black Eight** hat vier vormontierte Rollen, die für viele Fahrzeugmodelle einsetzbar sind. Reklamationen lassen sich somit leicht vermeiden.



# Sicherheitshinweise    Zubehör

## Zu Ihrem Schutz



**Handschutz benutzen!**



**Black Eight Applikator  
Rollen-Set für HYUNDAI/  
KIA SK-Profil**

Art. Nr.: 01069401



**Black Eight Applikator  
Rollen-Set für AUDI  
SK-Profil**

Art. Nr.: 01069402



**Black Eight Applikator  
Rollen-Set für MERCEDES  
SK-Profil**

Art. Nr.: 01069403

# Zubehör



**Black Eight Applikator  
Rollen-Set für FORD/  
MERCEDES/VW SK-Profil**

Art. Nr.: 01069404



**Black Eight Applikator  
Rollen-Set für AUDI/FIAT/  
JAGUAR/RENAULT/SEAT/  
VW SK-Profil**

Art. Nr.: 01069407



**Black Eight Applikator Rol-  
len-Set für JEEP/MERCEDES/  
OPEL/SKODA/VOLVO/VW  
SK-Profil**

Art. Nr.: 01069405



**Black Eight Applikator  
Distanzstück für OPEL  
SK-Profil**

Art. Nr.: 01069408



**Black Eight Applikator  
Rollen-Set für AUDI/  
MERCEDES/VW SK-Profil**

Art. Nr.: 01069406

# 1.

Scheibensiebdruck reinigen und primern.




# 2.

Hebel umlegen und Profilapplikator öffnen.



### 3.

Schutzfolie nach und nach vom Profil abziehen.  
Profil in Führungsrollen einlegen.

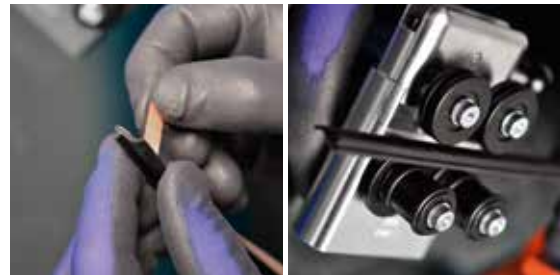

### 4.

Profilapplikator mit Führungsrollen und eingelegtem  
Profil an Scheibenkante anlegen und ausrichten.



## 5.

Hebel umlegen, um den korrekten Anpressdruck zu erzeugen. Auf richtige Positionierung des Profils in den Führungsrollen achten.



## 6.

Den Profilapplikator am Handgriff führen und über die gesamte Scheibenkante fahren. Schutzfolie dabei weiter langsam vom Profil abziehen.





## Head office

### **PMA/TOOLS AG**

Siemensring 42  
47877 Willich/Germany  
Tel.: +49 2154 922230  
Fax: +49 2154 922255  
E-Mail: [info@pma-tools.de](mailto:info@pma-tools.de)  
[www.pma-tools.de](http://www.pma-tools.de)

## Subsidiaries

### **PMA/TOOLS FRANCE**

Z.A.-214, rue de la Warnave  
59850 Nieppe  
Tél.: +33 320 970249  
Fax: +33 320 326140  
E-Mail: [info@pma-tools.fr](mailto:info@pma-tools.fr)  
[www.pma-tools.fr](http://www.pma-tools.fr)

### **PMA/TOOLS España S.L.U.**

Sta. Margarida de Boada Vell 7-9  
P.I. Riera de Caldes, Nave 12  
08184 Palau-solità i  
Plegamans (BCN)  
Tel.: +34 93 8648517  
Fax: +34 93 8640020  
E-Mail: [info@pma-tools.es](mailto:info@pma-tools.es)  
[www.pma-tools.es](http://www.pma-tools.es)

### **PMA/TOOLS Inc.**

201 Mills St.  
East Flat Rock  
NC 28726, USA  
Tel.: +1 828 2334060  
Fax: +1 828 2334070  
E-Mail: [info@pmatools.com](mailto:info@pmatools.com)  
[www.pmatools.com](http://www.pmatools.com)

### **PMA Tools Co. Ltd.**

Building No. 8  
East Guangzhou Road No. 188  
215413 Taicang  
Jiangsu Province  
P.R. China  
Tel.: +86 512 33011211  
E-Mail: [china@pma-tools.com](mailto:china@pma-tools.com)